


3322

Table 2


If the problem goes on, contact the seller or the most authorized service.

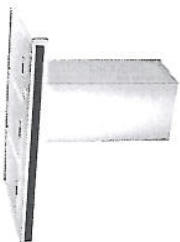


3173

MODEL


INTRODUCTION OF DEVICE

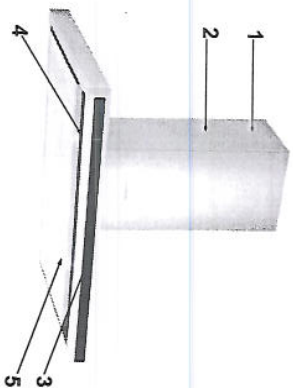

3175

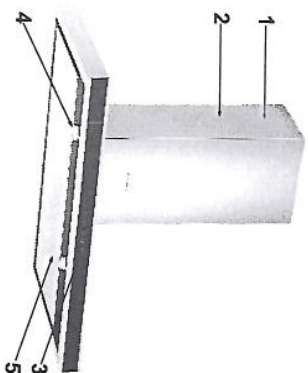


3322

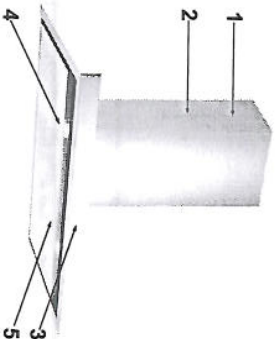


3174


- 1-Internal Chimney
- 2-External Chimney
- 3-Control Panel
- 4-Hob Illumination
- 5) Split Extraction Plate

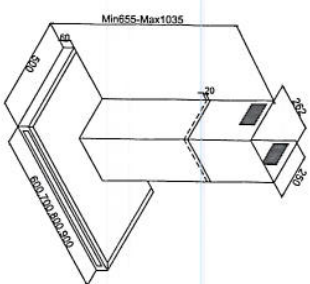

3175

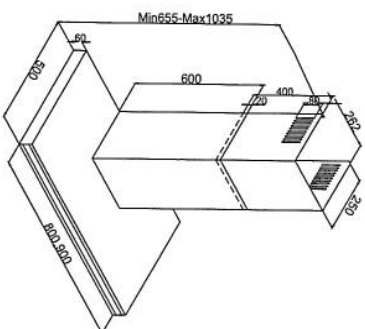

3322

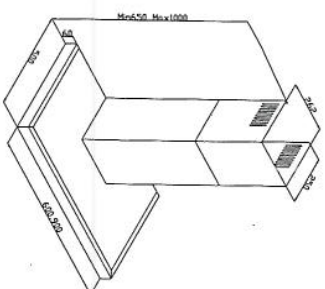

3174

TECHNICAL SPECIFICATIONS

Feeding Voltage	220-240 V 50Hz
Motor Isolation Class	F
Isolation Class	CLASS I

Table 1

In order to use the cooker hood efficiently:



*Use ducts of 150/120mm diameter and as few bends as possible when you make the chimney connection.

*Pay attention to aluminum filters' cleaning periods and changing periods of carbon filters.

*Use the product at middle speed if high suction power is not necessary.
*In order to ensure that ventilation is sufficient, the fan must be switched on.

in order to ensure that ventilation occurs correctly, windows of the kitchen should be kept closed.


Cleaning Periods of the Aluminum Filters:

Filters should be cleaned when “⌂” signal appears on Display or (according to usage) each 2-3 weeks. In order to remove “⌂” signal, after the filters are cleaned and replaced to their place, press  button more than 3 seconds (when the product is at off position). Letter “E” will appear on Display and the product will operate as normal. If you would like to continue using the product without deleting “⌂” signal, when you press the  button active speed will appear for 1 second, then “⌂” signal will appear once more and the motor will continue operating.

NOTE: "C" signal will appear after usage of the product for 60 hours.



Usage of remote control

You can use your chimney hood with remote control. Please follow below directions.

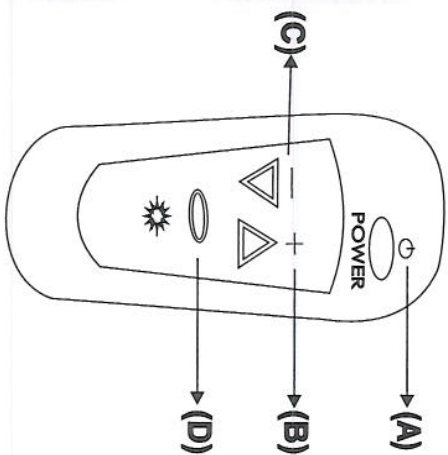

- A) Motor on/off
- B) Speed up
- C) Speed down
- D) Switch lamps on/off

INTRODUCTION OF DEVICE

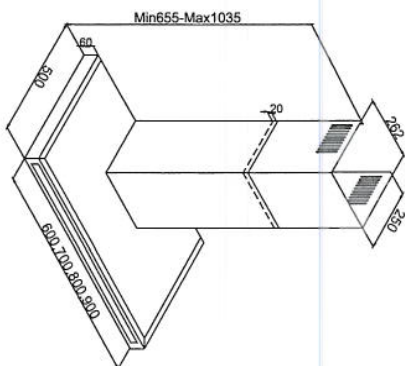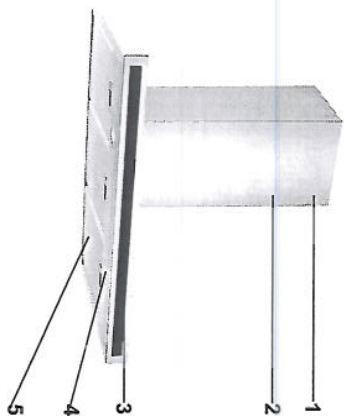

- 1-Internal Chimney
- 2-External Chimney
- 3-Control Panel
- 4-Hob Illumination
- 5) Aluminum Cassette Filter



 
WARNINGS AND SAFETY PRECAUTIONS


- *This product is designed for usage at home.
- *Your products usage voltage is 220-240 Volts~50Hz
- *Grounded plug is used at your product's electric network cable. This cable should definitely be plugged in a grounded socket.
- *All electrical networks should be set by a qualified electrician.
- *Installation applied by unauthorized people may cause the product to operate at low performance, damage of the product and accidents.
- *Power supply cable should not be exposed to press or smash during montage. Network cordon should not be placed near the cookers; it may cause fire if it melts.
- *Do not plug into the socket before installation of the product is completed.
- *Keep the plug at a reachable place so that you can unplugging it in case of any danger.
- *Do not touch the lamps when they are on for long time. Lamps may hurt your hand as they will be hot.
- *Kitchen cooker hoods are designed for usage during normal and home-style cooking. If it is used for other purposes, failure risk occurs and it will be out of warranty.
- *Follow applicable rules and directions for passing out outlet air. (This warning is not valid for usage without chimney.)
- *Flaming foods should not be cooked under the product.
- *Start your product after you put pot, fry-pan etc. on the hob. Otherwise high temperature may cause some parts of your product to get deformed.
- *Before you take pot, fry-pan etc. from the hob, put their lids on.
- *Do not leave hot oil on the hob. Pots that have hot oil in them may cause self-ignition.
- *Pay attention to curtains and covers during cooking of meals like frying because oil may flare up.
- *Make sure that filters are changed in convenience. Filters that are not changed at appropriate time has risk of causing fire due to oil that will be gathered on them.
- *Do not use filter materials that are not flame resistant instead of filter.
- *Do not operate your product without aluminum filter; do not remove filters when the product is on.
- *In case of flame, cut power of the product and the cooking appliances. (Cut power of the product by unplugging it off the socket).
- *Your product may cause fire risk if cleaning is not applied periodically.
- *Cut power of the product before maintenance process. (Cut power of the device by unplugging it)

Usage of 5 Speed Digital Control

Usage


Remove protective folio on the inox product after installation.

Speed Selection The product has 5 speeds of ventilation level. One of 1,2,3,...5 speeds is selected in accordance with steam of cooking or fry. Motor is started pressing  control button on the front panel. Speed is increased pressing  button, and decreased by pressing  button. Automatic timer (TIMER) is available at the models with electronic remote control.

When you press  button more than 2 seconds, timer function will be on for 15 minutes. When the timer is on, Display will signal and the motor will be off automatically 15 minutes later. Please use the cooker and the product at the same time to enable circulation. Doing so, air suction power will be affected positively. We recommend you to operate your product for few minutes more after the cooking is completed to enable absorption rest of smell and steam.



Illumination

The product has 2 lamps and one lamp button to operate illumination. Press  lamp button in order to start illumination.

NOTE: If your product has dimmer function please pay attention to the explanation stated below.

Changing Brightness of the Lamp (Dimmer):

When the lamp is on, lamp's brightness starts to change continuously if you keep lamp button pressed. When you get the brightness level that you wish and stop pressing the button, brightness that is set will be recorded, and the product will start with the same brightness during next usage. When you press the lamp button 2 times consecutively, the lamp will be on at the highest brightness level. The lamp will always start at the brightness level that is set during last usage.


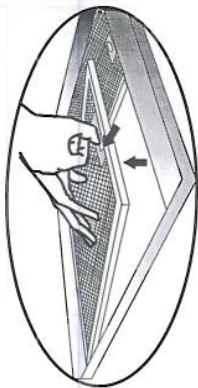


Figure 5

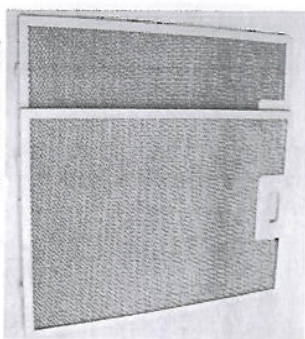

**Washable Aluminum
Cassette Filter**

Picture 17

MAINTENANCE

- *Disconnect electricity connection before maintenance and cleaning process.
- *Aluminum cassette filter holds the dust and the oil in the air.
- *Metal filter should be washed once in a month with hot and soaped water or, if possible, at dishwasher (60C).
- *Take off aluminum cassette filter pressing on springy latches on end point. After cleaning, do not replace before it dries.
- *Outer surface of the cooker hood should be wiped with a wet cloth that is wetted with water or alcohol.
- *Please avoid contact of electronic parts with water or similar materials.
- *Using inox cleaning and maintenance products available in the market will help your product to perform longer.
- Warning:** Aluminum filters may be washed in the dishwasher. Color of aluminum filters may change after several washings. This is normal and it is not necessary to change the filters. *umduur ve filtrelerin deđiřtirilmesini gerektirmez.*

Efficient Ventilation

In order to ensure correct ventilation, keep your kitchen windows closed.

IMPORTANT NOTE

Please pay attention when the product is operated at the same time with a product which operates using air and fuel (for instance; heater, water heater etc. which operates using gas, diesel fuel, coal or wood), since cooker hood may affect burning negatively as it directs the air out.

This warning is not valid for usage without chimney.

*When chimney hood and the appliances working with energy other than electricity are operated at the same time, negative pressure in the room should not be more than 4 Pa (4 x 10⁻³ bar)

*If there is an appliance working with fuel or gaseous fuel at the same place with your hood, this appliance's exhaust should be isolated from its volume totally and the appliance should be hermetic type.

*When chimney connection is applied to your product, use ducts of 150mm or 120mm diameter. Duct connection should be as short as possible and should include few bends.

*Keep package materials away from children as they may be dangerous for them.

"CAUTION: Accessible parts may become hot when used with cooking appliances"

"The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction"

Warning about Transportation and Carriage

- *All the materials used at package of your product are suitable for recycling.
- *Please comply with the signs on the product's box during transportation.
- *Hold the holders placed at sides of the box in order to carry your product.
- *If you need transportation;
- *Keep the original box.
- *Carry your product in its original box; comply with the carrying signs on the product's box.
- *If there is no original package;
- *Do not put heavy material on the chimney hood.
- *Keep the external surface from bash.
- *Pack your product to avoid damages.

*Be sure that your child does not play with the product. Do not allow kids to use your product.

*If power supply cable is damaged, this cable should be changed by its producer or its service agency or a personnel who is a specialist at the same level in order to prevent a dangerous situation.

*In case of flame, cut power of the cooker hood and the cooking appliances, cover the flame. Never use water in order to extinguish it.

Use "MAX 6 A" fuse at cooker hood installment for your security.

Standard Accessories



Picture 1

Plastic chimney

Plastic chimney is applied to chimney hood air outlet (Photo 2)

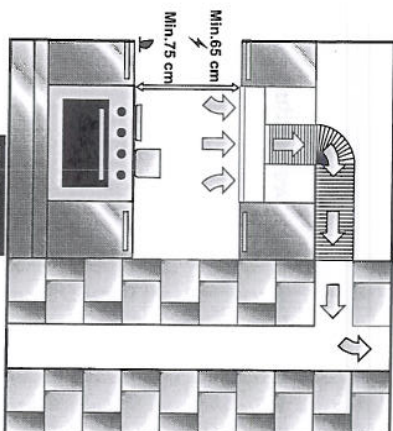


Figure 1

Place of the Product:

After installation of your product, distance between range hood and electrical hob should be at least 65 cm and gas hobs at least 75cm. Fig. 1

Installation, taking off your product from its package:


- *Check if there is any deformation on your product.
- *Transportation damages and failures should immediately be reported to the transportation responsible.
- *If you notice any damage please report to the seller.
- ***Do not allow children to play with packing material!!!**

MONTAGE OF ISLAND CHIMNEY HOOD

INSTALLATION

Assembly of hanging sheet to the chimney hood:

There are 2 hanging sheets (L type) for hanging the device to the hanging screw. These sheets are provided with the screw set to enable packing convenience. Before hanging the device, screw these sheets to the M5 nailing nuts with M5 X 40 bolts Picture 2

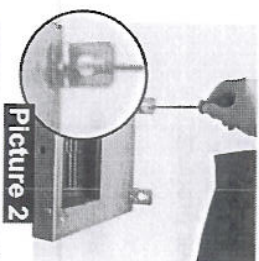

Picture 2



Picture 3

Installation of plastic outlet :Screw plastic outlet with 3,5 x 9,5 screws to the top plate of motor box.Picture 3

Carbon Filter Usage

Your product is compatible with two types of carbon filters. You may see following information on how to use carbon filters. Before installing or replacing carbon filter, first you should cut your product's power off. Carbon filters should be replaced with a new one each 3-5 months because it is used at kitchens that does not have chimney outlet. Carbon filter should never be washed. Grease filters should be installed on the product even when carbon filter is not in use. Do not use your product without grease filter.

Replacing Carbon Filter

It is necessary to install 2 carbon filters to your product. To place the carbon filter, place your filter on connection channels on motor and turn it clockwise. In order to remove filter, turn it anti-clockwise. Fig. 4

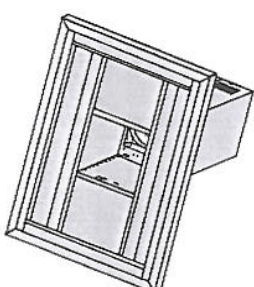


Figure 4


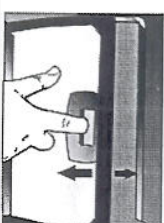


Figure 4a

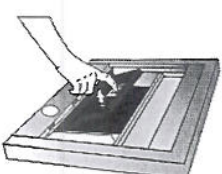

Changing Aluminum Cassette Carbon Filter
In order to take the carbon filter off, pull it towards yourself holding the upper latch. Fig. 4a

Replacing the Lamps

Cut off the connection of the cooker hood with electricity. Take off the aluminum cassette filter. Take off the failed lamp and replace it with a new one that is of the same rating. (Please wait for the lamps to cool as they might hurt your hand.)

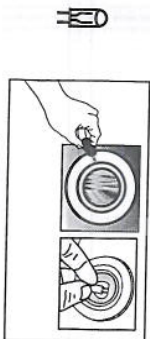


Figure 3


Replacing 20W Halogen Lamps

Take off the glass cover on the lamp with a substance that will not scratch surface of the product as shown on the figure. Take off the faulty lamp pulling it downwards and replace it with a new one. Fig.3

Note: Do not hold the new lamp with naked hand, sweat or wetness of your hand will cause the lamp to fail because of the heat that will occur when the lamp is on.

Replacing 50W Halogen Lamp

In order to change halogen lamps, take the lamp downwards pushing back of lamp holder downwards and then turning it a little bit anti-clockwise take it off downwards. Figure 14

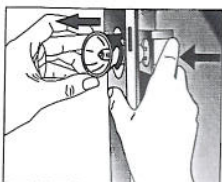

Functions of the Product


Your hood is compatible for use with our without chimney.

Usage with chimney

The product should be connected to a chimney that will direct the air out during usage with chimney. In order to achieve best performance, pay attention that the duct system follows the shortest way for connection to the chimney. Your product is produced as it will be appropriate for usage with chimney.

Attention!!!

Outlet of the product should not be connected to air canals that have other smoke as well.

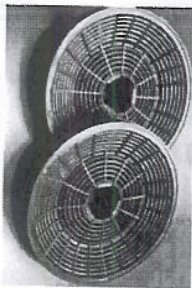

Picture 16

Active Carbon Filter

To provide air recirculation where product's chimney air outlet cannot be connected to exterior, it is necessary to use active carbon filter with your product. You may purchase this accessory from authorized sellers and after sales services. Picture 16

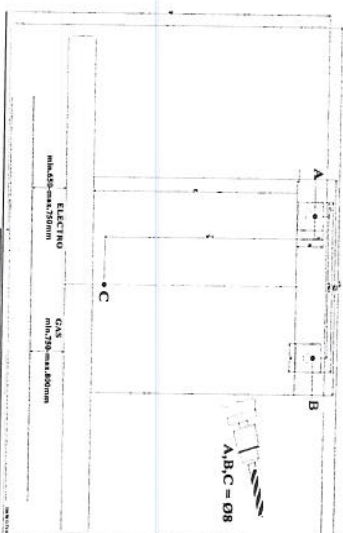


Figure 2

Drilling Of Hanging Holes

Attach mounting template to the wall that chimney hood will be installed. Drill A,B,C points by using Ø 8 mm. For screwing chimney montage plate drill Ø 6mm holes by consediring to min. and max. length of product. (figure 2)

Dowel Insertion

For suspension screw, insert Ø8mm dowels into drilled holes (A, B, C). For chimney mounting sheet, insert 2 dowels of Ø6mm into holes drilled by using Ø6mm drill. Picture 4



Picture 4




Picture 5



Picture 6

Screwing of Suspension Screws

Screw suspension into Ø8mm dowels (A,B) inserted into the wall by using 5,5x45 screws. There should be 5mm interval between wall and the screw head. Picture 6

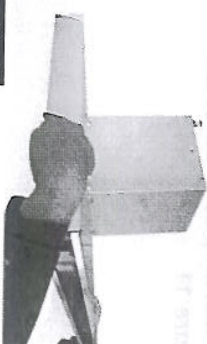

Resim 7

Installation of chimney hood


Lift the chimney hood and connect L formed hanging plates which are on hood cabin to A,B points on wall. Picture 7



Picture 8


After completing of hanging tighten the screws by using a screwdriver for not causing the remove of the product.

Picture 8

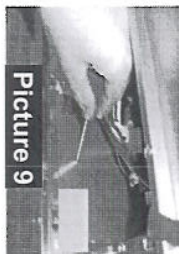


Picture 9

When fixing is completed screw body to wall from C point which is inside of body. **Picture 9**

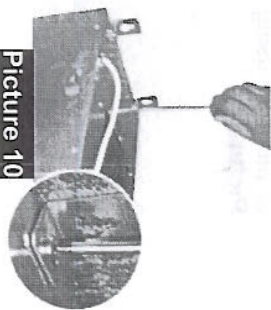

Picture 10


Note: If there is inclination soften M5 screws on top and correct parallelism. **Picture 10**

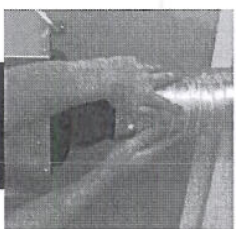

Picture 11

Installation of Aluminium Duct :
Locate aluminium flexible duct on plastic outlet and chimney hole on wall. **Picture 11**

Avoid multiple folds and angles as they may negatively affect air suction capacity. **Figure 12**

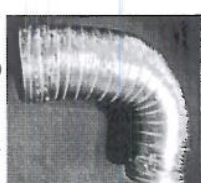


Correct




Incorrect

Picture 12

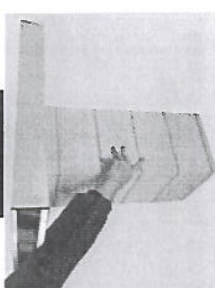


Picture 13

Install chimneys around the body. **Picture 13**

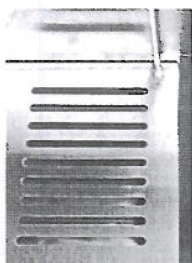

Picture 14

Screw the inner hood in to the chimney mounting sheet which is fixed to wall from its upper outer sides. **Picture 14**

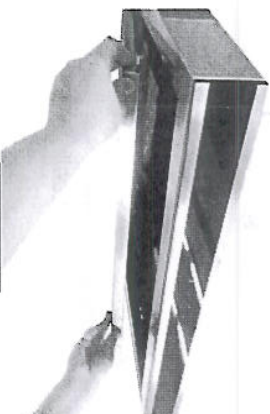

Picture 15

Removing Split Extraction Plate
To remove split extraction plate, hold right and left top points and pull down. **Picture 15**